



INSTALLATION NOTES

1. Set door speeds and verify proper door operation prior to final connection of sensors system.
2. Technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
3. On Knowing Act applications, push/pull activation must not be used.
4. When using two controls (Sim Pair, Double Egress) wire each control as shown and add sync lines between controls on TB1 pins 1,2, 3 and 7.

OC-904 Dipswitch Settings Chart		
Dipswitch Settings	OFF	ON
1. Safety Output	N.O.	N.C.
2. Stall Output	N.O.	N.C.
3. Auto / K.A.	Automatic	Knowing Act
4. Future Use		

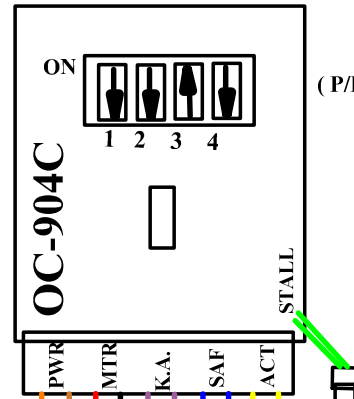

All Activation devices (P/P, card reader, sensor, etc.) connect to the TDM.

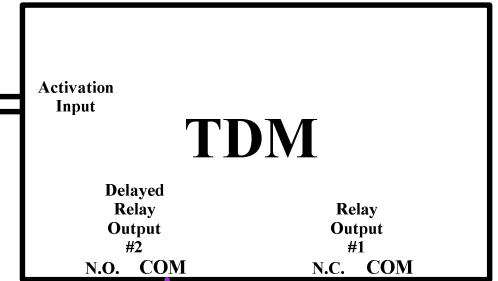

NOTE:
When installing pairs the purple wires of the OC-904's connect in parallel. Be sure to observe polarity. (+ to +, - to -)



Magnetic lock with N.C. contact shown. Other electric locks may require a N.O. contact.

